 


direct connect to kitchen faucet

## Filter Replacement (every 6 months)



For FREE Filter Replacement Reminder, go to  
[www.protectplus.com](http://www.protectplus.com)

Note: Place bucket or rags under the filter system to catch any water drops.

- Using the Filter Housing Wrench  
Turn the filter right to left (as you face it) until it releases. Remove and discard used filter.
- See page 8 for inserting new filter.
- Changing water filter on a regular basis ensures optimum performance of the water filtration system.



direct connect to kitchen faucet

## Use and Care

### Brita® Filtration System USS-120

Usage and quality of water in your incoming water line affect the life of filter cartridges. Cartridges should be replaced sooner if water pressure at the faucet begins to drop noticeably or if the filter fails to perform satisfactorily.

After prolonged periods of non-use, it is recommended that the filter system be flushed thoroughly. Let water run for 10 minutes before using.

The filter used with this filter system has a limited service life. Changes in taste, odor, and/or flow of the water being filtered indicate that the filter should be replaced.

Please see the Performance Data Sheet for the certified performance of specific systems with stated cartridges.

System	Filter Model Numbers
USS-120 Drinking Water Filtration System	USF-101 - Level 1 filter (Included with system)
	USF-102 - Level 2 filter
	USF-103 - Level 3 filter
	USF-104 - Level 4 filter
Replace filters every six months or sooner.	

Replacement Parts Part Number	Description
WFAS-300	Mounting Screws (Package of 2)
WFAF-600	Kitchen Faucet Adapter
WFAF-300	1/4" Plastic Tubing
BRTAH-100	System Head
FCT-102	Filtered Water Faucet - Chrome